



## Las Vegas Fire & Rescue Fire Prevention Division Information Sheet



Effective Date: July 1, 2014

CLV Ordinance #6325

*The items listed are basic information only. Codes are subject to change. Additional requirements may apply.*

# Posting of Occupant Load

The Occupant load is calculated and issued by the Building Official. **IBC 110.2**

Every room or space that is classified as a Place of Assembly shall have the occupant load posted in a conspicuous place, near the main entrance or exit access. **IFC 1004.3**

**Sub-dividable rooms.** Rooms capable of being sub-divided into smaller spaces that are capable of an occupant load of 50 or more persons shall install *Occupant load signs* within those spaces at the main exit.

**Sign Construction.** Signs shall be constructed of durable material, with a minimum 1 inch letters and numbers, on a contrasting background to be readily visible.

The specific requirements for Occupant Load can be found in **Section 1004** of the *International Fire Code*.

**Example:**

|  |
|--|
| MAXIMUM ROOM<br>CAPACITY _____ PERSONS |
|--|

**Las Vegas Fire & Rescue**  
Fire Prevention Division  
(702)229-0366

[www.lasvegasnevada.gov/LawsCodes/fire\\_code.asp](http://www.lasvegasnevada.gov/LawsCodes/fire_code.asp)